



emporia
HAPPY

English

➤ CONTENTS

1.	Your mobile phone at a glance	04
2.	Setting up your phone	06
2.1	Inserting a SIM card	06
2.2	Inserting the battery	06
2.3	Charging the battery	07
2.4	Turning on the phone	08
2.5	Entering a PIN code	08
2.6	Setting the language, time and battery optimisation	08
2.7	Saving battery power	08
3.	Using the phone	09
3.1	Home screen	09
3.2	Menu	10
3.3	Dual-function keys	10
3.4	Writing text	11
4.	Calls	12
4.1	Accepting, declining or ending a call	12
4.2	Calling someone	12
5.	Messages (SMS)	13
5.1	Writing and sending a message	13
5.2	Reading a message	13
6.	FM radio	14
7.	Tools	15
7.1	Alarm clock	15
7.2	Bluetooth	15

8.	Contacts	16
8.1	Searching for a contact in the phone book	16
8.2	Adding a contact	16
8.3	Sending contact via SMS	17
8.4	Copying contacts	17
8.5	Saving or changing a speed-dial key	17
8.6	Contact settings	18
8.7	SMS in contacts	18
9.	Call history	19
10.	Settings	20
10.1	Silent/Sleep mode	20
10.2	Sound and alerts	20
10.3	Keypad lock	21
10.4	Voicemail number	22
10.5	Security settings	22
10.6	0000 to enter settings	22
10.7	Battery optimisation	23
10.8	Power saving mode	23
10.9	Master reset	23
11.	Emporia emergency call function	24
12.	Warranty and service	26
13.	Declaration of conformity (DOC)	29

1. YOUR MOBILE PHONE AT A GLANCE


- 1 Loudspeaker
- 2 Display (screen)
- 12    **Speed-dial keys**
- 9  **Green key**
 - Start or accept a call
 - In the menu: Confirm selection
 - On standby: Access **Call Info**
- 10   **Arrow keys**
 - Use these to flick through your **Contacts** and the **Menu**.
 - When the phone is on standby, press  to access **Menu**.
 - When the phone is on standby, press  to access **Contacts**.
- 11  **Red key**
 - When in a call: End
 - When in the menu: One step back
 - When entering digits or letters: Delete
 - To switch on or off: press for 2 seconds
- 13  **key** (voicemail)
- 5  **Keypad lock**
- 6  **Torch button**
- 10  **key**: Silent/Sleep mode



- 17 Headset port
- 16 Port for USB charging cable
- 18 Opening for removing the battery cover
- 4 **Handset volume controls**
- 19 Torch (LED)
- ♥ **Emergency button** ♥
(back of the phone)


2. SETTING UP YOUR PHONE

2.1 Inserting a SIM card

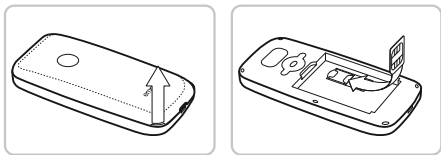

1. Remove the battery cover (opening in the top left-hand corner).
2. Insert the SIM card into the SIM card holder with the gold contacts facing down.

2.2 Inserting the battery

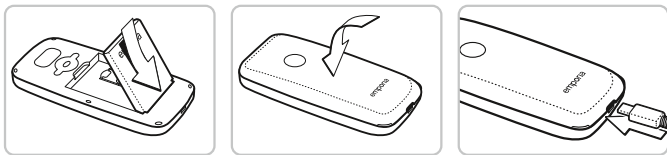

1. Insert the battery, making sure that the battery contacts touch the phone's gold contacts.
2. Place the battery cover over the battery and click it into place.

i *Charge the battery for at least 4 hours before the first time you use it. Only use batteries and charging cables that are permitted for use with this specific model.*

2.3 Charging the battery

-  *Use a standard mains plug that you have at home. You can find suitable original emporia accessories in the emporia webshop at <https://www.emporiamobile.com/en/collections/accessories>*
-  *Never connect the phone to the charger or a PC if a battery has not been inserted. Do not attempt to operate the phone without a battery inserted. Doing this can damage the phone.*
- **Charging with the charging cable**
 - To avoid contact faults with the USB connector, only use the charging cable supplied with the phone for charging.
 - Connect the USB cable to the mains plug.
 - Plug the charging cable into the USB port on the phone.
 - Then plug the mains plug into a wall socket.
- **Using the charging cradle**
 - Connect the USB cable to the mains plug.
 - Plug the charging cable into the USB port on the back of the charging cradle and then
 - place the phone in the charging cradle.
-  *If you intend to use this method to charge your phone every time, you can leave the charging cable plugged into the charging cradle permanently.*

2.4 Turning on the phone

- Press and hold the  key for at least 2 seconds until the emporia logo appears. It will take a few seconds for the home screen to be displayed.

2.5 Entering a PIN code

Enter the four-digit PIN code for your SIM card when asked to do so and confirm the entry.

-  *You have a maximum of three attempts to enter the correct PIN. After that, the SIM card can only be unblocked with the PUK code. (For PIN and PUK, see the network operator's info)*

2.6 Setting the language, time and battery optimisation

1. Use  to select a **Language** and then confirm your selection by pressing **OK** .
2. Set the **Time** and **Date** and then save these settings.
3. Activate or deactivate **Battery optimisation**.


2.7 Saving battery power

After a few seconds of inactivity, the screen will turn off to save battery power. In the event of an incoming call or you pressing any key, the screen will light up again. If the keypad is set to lock automatically, the phone will only respond if the green  button or the  button (on the side of the phone) is pressed.

3. USING THE PHONE

3.1 Home screen

If your phone is on but not using a function, it will display the home screen. You can return to the home screen any time by pressing the red key  several times.

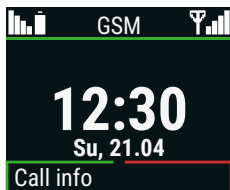

> Symbols on the screen

 Network signal strength  Roaming (abroad)

 Battery indicator

 Battery optimisation

 Power saving mode

 Battery optimisation + Power saving mode

 Missed call

 Call forwarding

 New text (SMS) message

 Alarm on

 Bluetooth activated

 Bluetooth connected

Profile:

 Silent/Sleep mode

 Maximum/Bus mode


 Meeting/theatre mode

3.2 Menu

The  key will display the menu.

The menu is a list that enables you to manage the phone's various functions and adapt the phone to your needs.

- Use the arrow keys to scroll through the menu.
- **The items available in the menu are Messages, FM Radio, Tools, Contacts, Call history and Settings.**
- Use the green key  and red key  beneath the screen to confirm your selection or to return to the home screen.

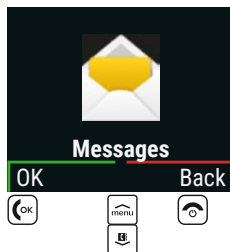

3.3 Dual-function keys

- **Pressing and holding the  key:**
Allows you to listen to your voicemail
- **Pressing and holding the  key:** Silent/Sleep mode
- **Pressing the  key twice:**
+ for a country code, such as +49 for Germany
- **Pressing and holding the  key:**
Turn the keypad lock on or off in standby mode
- **Pressing and holding the number  keys:**
use **Speed-dial on number keys**
- **Pressing and holding the  key:**
Torch on continuously

3.4 Writing text

You enter text using the keypad in **Manual mode**.

› Use the key to switch between the input methods.

- **abc**: All letters in lower case
- **ABC**: All letters in upper case
- **Abc**: The first letter is in upper case and all the letters that follow are in lower case.
- **123**: Digits

› Inputting text in manual mode

Press a number key multiple times

(e.g. 4 4 2 5 5 5 5 5 5 6 6 6 for **Hallo**).

- Special characters and symbols have been assigned to the various keys, but can differ in some languages:

 1 ao	. , - ? ! ' @ : ; () *	 2 abc	a b c 2 ä å à á â ã æ ç á ć
 3 def	d e f 3 đ é ê ë € è ê ì	 4 ghi	g h i 4 î ï ï ï ğ ĺ
 5 jkl	j k l 5 £	 6 mno	m n o 6 ö ñ ô œ ó ò
 7 pqr	p q r s 7 ß \$ §	 8 tuv	t u v 8 ü ù û ú
 9 wxyz	w x y z 9 ŵ ý ÿ	 0 Space	Space 0
 +	. , ? ! ' " () @ \ / : _ ; + - * = % & < > £ \$ ¥ § € □ [] {} ~ #		

4. CALLS

4.1 Accepting, declining or ending a call

- **To answer:** Press the green key  for **Accept**.
- **To decline or end a call:** Press the red button .
- To mute the ringtone temporarily, press the  volume control button.

 *If the screen has gone dark during the call, press  the red key twice to hang up.*

4.2 Calling someone

› Dialling a number

1. Enter the phone number you want to dial (incl. the area code) using the keypad.
2. Start the call by pressing the green key .

› Using the redial function

1. When on the home screen, press the green key .
Your **Call history** will be displayed.
2. Use the arrow keys  and  to select a number.
3. Start the call by pressing the green key .

 *To go hands-free during a call, open **Options** and turn on the speaker.*

5. MESSAGES (SMS)

- **Menu items:** Write message, Received, Unsent, Sent, Delete messages, Broadcast message, Templates, Send contact via SMS, SMS in contacts, Message settings

5.1 Writing and sending a message

1. Open **Menu**  ⇒ **Messages**.
2. Select **Write message**.
3. Enter the text using the keypad.
4. To specify a recipient for the SMS, open **Options** and select **Send**.
5. You can now select a **Contact** from the phone book or type in a **Phone number** using the keypad.

5.2 Reading a message

1. When you receive a new message, a symbol  will appear on the home screen.
2. Press the green key  for **View** and to read the message immediately.
3. You can find the text message again later on in **Menu**  ⇒ **Messages** ⇒ **Received**
4. To read a message, tap on it.

6. FM RADIO

- **Searching for a station**

You can set the station using the arrow keys  .

- **Adjusting the volume**

You can adjust the volume of the radio with  and  on the side of the phone.

You cannot change the volume if you are in an Options menu item. In this case, close the Options menu first.

- **Station list**

This list will display all the radio stations that have already been saved.

- **Manual input**

If you know the frequency of the station you want, you can enter it here directly. Use this key  for the decimal point.

- **Auto search**

This function searches for all detectable stations and saves them in the station list together with their frequencies.

- **Loudspeaker**

Turn hands-free mode on to listen to the radio without a headset.

- **Exit**

Turn the radio off.



The FM radio will only work with a headset plugged in.

The headset takes on the role of the antenna.

7. TOOLS

› **Menu items: Alarm clock, Calendar, Calculator, FM radio, Bluetooth**

7.1 Alarm clock

1. Open **Set time**.
2. Enter your desired **Alarm time** and then **Save** it.
3. The alarm clock is activated and will now go off at the time you have set every day.
4. When the alarm is ringing, you can press the red key  to turn it off or the green key  to activate the snooze function.
5. Select **Off** to deactivate the alarm permanently.

7.2 Bluetooth

1. Turn the Bluetooth function **On**.
2. Tap on **Connect** and on **Search for new devices**.
A list of available devices will be displayed.
3. Select the device you want to pair the phone with from the list.
4. Follow the instructions to pair the devices.

 *Devices that have been connected before will be recognised and connected automatically.*

8. CONTACTS

- › **Menu items:** Search for name, Add contact, Edit contact, Delete, Send contact via SMS, Copy contacts, My number, Speed-dial keys, Speed-dial on number keys, Emergency contacts, Contact settings, SMS in contacts

8.1 Searching for a contact in the phone book

1. When on the home screen, press the phone book key  or open **Menu**  ⇒ **Contacts** ⇒ **Search for name**.
2. Use the arrow keys  and  to scroll through the entries or use the keypad to type the first letter of the contact you are looking for.
3. Start the call by pressing the green key .

8.2 Adding a contact

1. Open **Menu**  ⇒ **Contacts** ⇒ **Add contact**.
2. Enter the phone number and the person's name and then **Save** them.

 *Always save names and numbers with the international dialling code, e.g. +41 for Switzerland, +43 for Austria and +49 for Germany.*

8.3 Sending contact via SMS

1. Select the contact you want to send.
2. Enter the recipient's **Number** or **Search** for their name in your contacts.
3. You'll then send an SMS that the contact receives as text in the format **#Name#Number#**.

8.4 Copying contacts

You can save one or all the contacts on your SIM card in the phone's memory or vice versa.

8.5 Saving or changing a speed-dial key

1. Open **Menu**  ⇒ **Contacts** ⇒ **Speed-dial keys** or **Speed-dial on number keys**.
2. Select a vacant position from the list.
3. Enter a **Name** and **Number** or **Search** for a contact in the phone book.
4. To change a speed-dial key, select a position from the list and change or delete its link to the contact it's currently associated with.

8.6 Contact settings

- **Save entry on SIM or Phone**
- **Memory in use: SIM, Phone or both**
- **Automatically save in Contacts: On or Off**
- **Memory status:** Shows how many contacts are stored and the maximum number that can be stored.

8.7 SMS in contacts

If you receive a message that contains text in the format **#Name#Number#**, the text will be saved in your contacts automatically. Specify whether this function should be switched on or off and whether only entries from saved numbers are permitted in contacts.

9. CALL HISTORY

- **Menu items: Missed calls, Dialed calls, Received calls, Call duration and Delete**

Each list is sorted chronologically and shows the date and time of each call beneath the contact's name or number.

Options: Call, Edit number before calling, Write message, Delete

When on the home screen, you can access your **Call info** containing all your calls by pressing the green key .

The symbols indicate the following:

- **Missed calls** 
- **Dialed calls** 
- **Received calls** 
- **Call duration**
 -  Duration of the last call
 -  Total duration of all outgoing calls
 -  Total duration of all received calls
 -  Total duration of all calls

10. SETTINGS

- › **Menu items:** Silent/Sleep mode, Sound and alerts, Handset volume, Display and light, Time and date, Language, Call waiting, Call forwarding, Suppress number, Auto keypad lock, Network selection, Voicemail number, Emergency contacts, Emergency button, Battery optimisation, Power saving mode, Security settings, 0000 to enter settings, Master reset

10.1 Silent/Sleep mode

In this mode, incoming calls will only be indicated by a visual alert. The phone's ringtone and vibration are turned off.

10.2 Sound and alerts

You can personalise the settings for tones, alerts and vibration or select a set of predefined settings (profile).

- › **Menu items:** Ringtone, Alarm melody, Ringer volume, Silent/Sleep mode, Meeting/Theatre mode, Maximum/Bus mode, Vibra for calls, Vibra for alarm clock, Key tones, Message tone, Vibra for messages, Handset volume, Handsfree volume, Confirmation tone, Emergency tone

10.3 Keypad lock

Prevent keys on your phone from being pressed accidentally by using the keypad lock

› Manual keypad lock

Press the  key (on the side of the phone) for 2 seconds.

Keypad lock on appears on the screen.

› Automatic keypad lock

Open the menu **Settings** and then the item **Auto keypad lock**. Now select whether the keypad should be locked automatically after **5 sec.**, **15 sec.**, **30 sec.**, **1 minute** or **5 minutes** of inactivity or whether this function should be switched off.

› Unlocking the keypad lock

Press the  key for 2 seconds.

Keypad unlocked appears on the screen.

The phone then responds to every press of a key again.

 *If the keypad lock is active, the phone will only respond if the green button or the  key is pressed. If any other key is pressed, the screen will remain dark to save energy.*

10.4 Voicemail number

Enter the number for your voicemail. You will find this number in the documents supplied by your network provider.

10.5 Security settings

- **PIN:** PIN request on/off and Change PIN
- **Phone code:** On/Off and Change (factory preset code 1234)

10.6 0000 to enter settings

Activate this safety mode to prevent changes being made to settings unintentionally.

10.7 Battery optimisation

Enable to limit charging to 80 % capacity of battery to extend battery lifespan.

10.8 Power saving mode

Power saving mode will turn off Bluetooth and lower LCD brightness for reduced power usage.

10.9 Master reset

You can restore all the factory settings on your phone (factory preset phone code: 1234).

11. EMPORIA EMERGENCY CALL FUNCTION

Your phone has an emergency call function that you can tailor to your specific needs.

1. Save your personal emergency contacts.
2. Do not enable the Emergency system until you have specified your emergency contacts.

 *Important! If you do not have any emergency contacts saved, have no credit on your prepaid phone card or have no reception, the European emergency number 112 will be dialled when the enabled button is pressed. This will put your call through to the nearest police station.*

Emporia does not assume liability for any costs incurred through you calling such an institution by mistake.

➤ How do I make an emergency call?

1. In an emergency, press and hold the emergency button on the back of the phone.
2. The five preset numbers will be dialled automatically in the order in which you have saved them.
3. At the same time as each emergency call, a text message (SMS) will be sent to the contact, saying:
»You will receive emergency call with loud beep-signal during conversion.Press 3 × 0 within 1 min, otherwise call will be dropped automatically!«

➤ **How do I stop an accidental emergency call?**

1. If you've started an emergency call by mistake, press the red key for 3 seconds to hang up.
This will interrupt the emergency call cycle.
2. Next, turn the phone off and on again to restore your emergency call status settings.

➤ **How do I save an emergency contact?**

1. Open **Settings** menu ⇒ **Emergency contacts**
⇒ **Add emergency contact**
2. Select an empty position.
3. Specify whether the contact is a private individual or a help organisation and also whether they should be sent an emergency call message in addition to receiving the call itself.
4. The list of your contacts will open. Tap on a contact you want to be notified in an emergency.

➤ **What does the recipient of an emergency call have to do?**

The contact must press the 0 key three times within 60 seconds or the next emergency contact will be called. This prevents the emergency call from going through to a contact's voicemail or answerphone.

GUARANTEE AND SERVICE

Manufacturer:

emporia telecom GmbH & Co. KG ·
Industriezeile 36, 4020 Linz · Austria

Importer:

emporia telecom GmbH & Co. KG

Contact:

<https://www.emporiamobile.com>

Brand name:

Model: emporiaHAPPY (E30.v3)

> Service

Emporia Service Centre

service@emporiatelecom.co.uk

Monday-Friday, 12⁰⁰-4⁰⁰ pm

- **United Kingdom:** +44 1923 94 77 78
www.emporiatelecom.co.uk/support/contact
- **Ireland:** +353 0818 000 102
www.emporiatelecom.ie/support/contact

> Guarantee

This guarantee is only valid if original batteries supplied by emporia have been used.

- **Mobile phone:** 12 months
- **Battery:** 6 months


> Scope of delivery

- **Mobile phone:**
emporiaHAPPY (E30.v3)
- **Battery:** AK-FN313
- **USB cable:** USB-C/USB-C
- **Table charging unit:** TL-E30
- **User guide**

> Technical details

- **Dimensions:** 114.5 × 52 × 12 mm

- **Weight:** 70 g



- **Power supply:**

USB-A adapter: DC 5V, min. 5W, max. 15W

USB-C adapter: DC 5V, ≤ 3 A, max. 15W

(You can use chargers with higher power ratings, but this will not increase the charging speed.)

- **Table charging unit:** input = output
- **Battery:** Li-ion 3.7V, 800 mAh, 2.96 Wh (replaceable)
- **Standby time:** 230 h*
- **Talk time:** 300 min*
(*The battery life can be reduced depending on network coverage and active applications.)
- **Internal antenna:**
SAR body: 1.10 W/kg
SAR head: 0.45 W/kg
SAR-limbs: 1.33 W/kg
- **Operating temperature range:**
-10° – +40°C
- **Hearing Aid Compatible M4/T4**
- **Bluetooth V 2.1**
- **Display:**
TFT 1.81", 128 × 160 px
- **RAM:** 32 MB
- **Memory (ROM):** 64 MB

› Frequencies

- **BT:** 2402 MHz - 2480 MHz
Transmitter power: < 0.0025 W
- **FM:** 87.6 MHz - 107.9 MHz
- **E-GSM 900/GPRS 900/EGPRS 900:**
TX: 880 - 915 MHz; RX: 925 - 960 MHz
Transmitter power: < 1.9231 W
- **E-GSM 1800/GPRS 1800/EGPRS 1800:**
TX: 1710 - 1785 MHz; RX: 1805 - 1880 MHz
Transmitter power: < 1.0 W
-

› Safety information

- Turn off your phone in hospitals and whenever you are near medical equipment. There should always be a distance of at least 20 cm between a pacemaker and the phone when it is on.
- Never try to control a vehicle while holding the phone in your hand. Always comply with relevant national laws and traffic regulations.
- Turn off the phone whenever you are travelling in an aeroplane.
- The phone must be switched off whenever it is near a petrol station or other places with explosive substances.
- Never shine the LED torch in the eyes of people or animals! (Protection class 3)
- To prevent hearing impairments, do not use the phone on a high speaker volume for extended periods of time. Do not hold the phone to your ear when hands-free mode is activated or the emergency button has been pressed.
- Using a headset on a high volume can cause hearing impairments. Check the volume of the headset you are using.
- The phone and the accessories may contain small parts. Keep the phone out of the reach of young children.
- Do not leave it where it will be directly exposed to the sun.
- As a precaution, we recommend disconnecting the phone from the charger during thunderstorms.
- The mains adapter serves as a separator between the product and your mains supply. The mains supply must be close to the device and easily accessible.



- This device has been tested for typical applications where the device is carried on the body. To meet the RF exposure requirements, the minimum distance between the body, in particular the user's head, and the handset including the antenna must be 0 cm. Belt clips, holsters and similar accessories from third parties used with this device must not contain metallic components. Accessories carried on the body that do not meet these requirements may not meet the RF exposure requirements and should be avoided. Only use the device's built-in antenna or an approved antenna.
- This device complies with the essential requirements and other relevant provisions of **2014/53/EU Radio Equipment Directive (RED)**. All the important radio test cases have been written.
- Caution: Risk of explosion if the battery is replaced by the wrong type. Dispose of the used batteries according to the instructions.
- The device complies with RF specifications when the device is 5mm from the body.
- Only use the device under good reception conditions to reduce the amount of radiation received.
- Use a hands-free device or loudspeaker.
- Children and adolescents should use wireless devices such as mobile phones sensibly, e.g. by avoiding night-time calls and limiting the frequency and duration of calls.
- Keep the device away from the abdomen of pregnant women.
- Keep the device away from the lower abdomen of teenagers.
- Think about your health – use your cell phone in moderation, use a headset and choose a device with a low SAR-value.

➤ Intended use

- This phone is robust and designed for mobile use. However, it still needs to be protected from moisture (rain, bathroom water, etc.) and heavy impacts.
- It is only designed for European network standards (AT, BE, CZ, DE, DK, ES, FI, FR, GB, HR, HU, IE, IT, NL, NO, PL, PT, SE, SI, SK, SZ and TR).
- Using it for any purpose other than that described above will result in damage to the product. Doing this also entails hazards such as fire, electric shocks, etc. This product must not be changed or modified, and the casing must not be opened.
-

> Ecodesign information

- Your device is equipped with a replaceable battery. Use your device only with an original battery. Although the battery can be charged and discharged hundreds of times, it will eventually wear out. If the talk and standby times are noticeably shorter than normal, replace the battery. Please follow the relevant instructions on our website or contact our customer service team by email: service@emporiainmobile.com
- For environmental reasons this package does not include a charger. This device can be powered with most USB power adapters and a cable with USB Type-C plug.

> Disposal

• Disposing of the packaging

The packaging and packaging aids are recyclable and should be recycled.

• Disposing of the battery

Batteries should never be disposed of as domestic refuse! As a consumer you are legally required to return used batteries. They can be handed in at one of your community's local collection points or at specialist stores.



• Disposing of the device

If this product ever wears out, please don't dispose of it as domestic refuse. To ensure you don't cause damage to the environment, take it to a collection or recycling centre where used devices are processed for recycling in an environmentally friendly manner.



> Declaration of conformity (DOC)

emporia telecom GmbH & Co. KG ·
Industriezeile 36, 4020 Linz · Austria,
hereby declares that the:
emporiaHAPPY (E30.v3)
telecommunication or radio device
complies with Directive:

- 1907/2006
- 2011/65/EU
- 2014/53/EU
- 2022/2380/EU
- 2023/1542/EU
- 2023/1670/EU

The full text of the declarations of
conformity can be viewed on this web page:
<https://www.emporiainmobile.com>

The image shows a large CE mark (Conformité Européenne) with a handwritten signature over it.

Sten Kirkbak
Managing Director emporia Telecom
10/07/2026, Linz/Austria

emporia online shop



www.emporiamobile.com

DA Der tages forbehold for trykfejl, fejltagelser og tekniske ændringer. **DE** Druckfehler, Irrtümer und technische Änderungen vorbehalten. **EN** Misprints, errors and technical changes excepted. **ES** Salvo erratas, errores y modificaciones técnicas. **FI** Pidätämme oikeuden painovirheisiin, erehdyksiin ja teknisiin muutoksiin. **FR** Toutes erreurs d'impression, erreurs et modifications techniques réservées. **IT** Con riserva di errori di stampa, inesattezze e modifiche tecniche. **IS** Með fyrirvara um prentvillur, mistök og tæknilegar breytingar. **NL** Drukfouten, vergissingen en technische wijzigingen voorbehouden. **NO** Det kan forekomme trykkfeil, feil og tekniske endringer. **PT** Exceto erros de impressão, erros e alterações técnicas. **SV** Med förbehåll för tryckfel, misstag och tekniska ändringar.

PartNo: E30.v3_BDA-V5_56105-ENG | 202607

